



13" DROP VISOR FOR 1 & 2 PIECE CURVED WINDSHIELD KENWORTH WITH STAINLESS TUBULAR STYLE MIRRORS BRACKETS. REPLACES FACTORY FIBERGLASS VISOR OR TRUCK WITH NO FACTORY VISOR WILL NOT WORK WITH CAST STYLE MIRROR BRACKETS

SIDE VIEW OF STABILIZER
(RESTS ON WINDSHIELD)

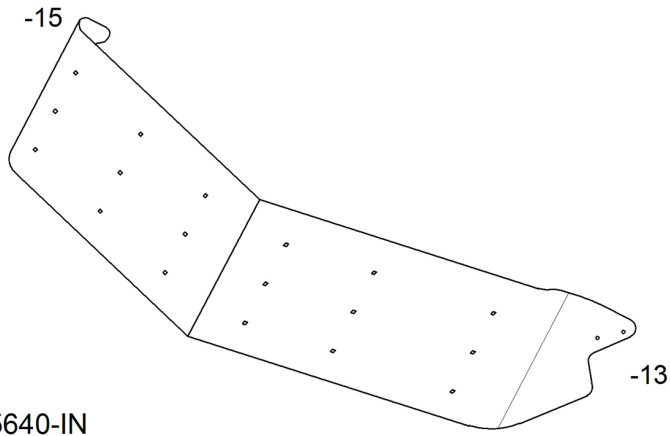

You will need to drill 1/2" holes for these brackets. Install using the supplied Well Nuts / Hex Bolts Flat Washers / Lock Washers

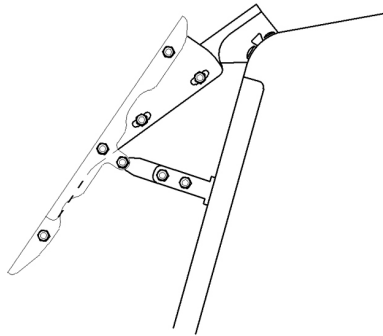